


Convenience electrics central control unit, tailgate handle release button, central locking switch, tailgate central locking motor, fuse holder

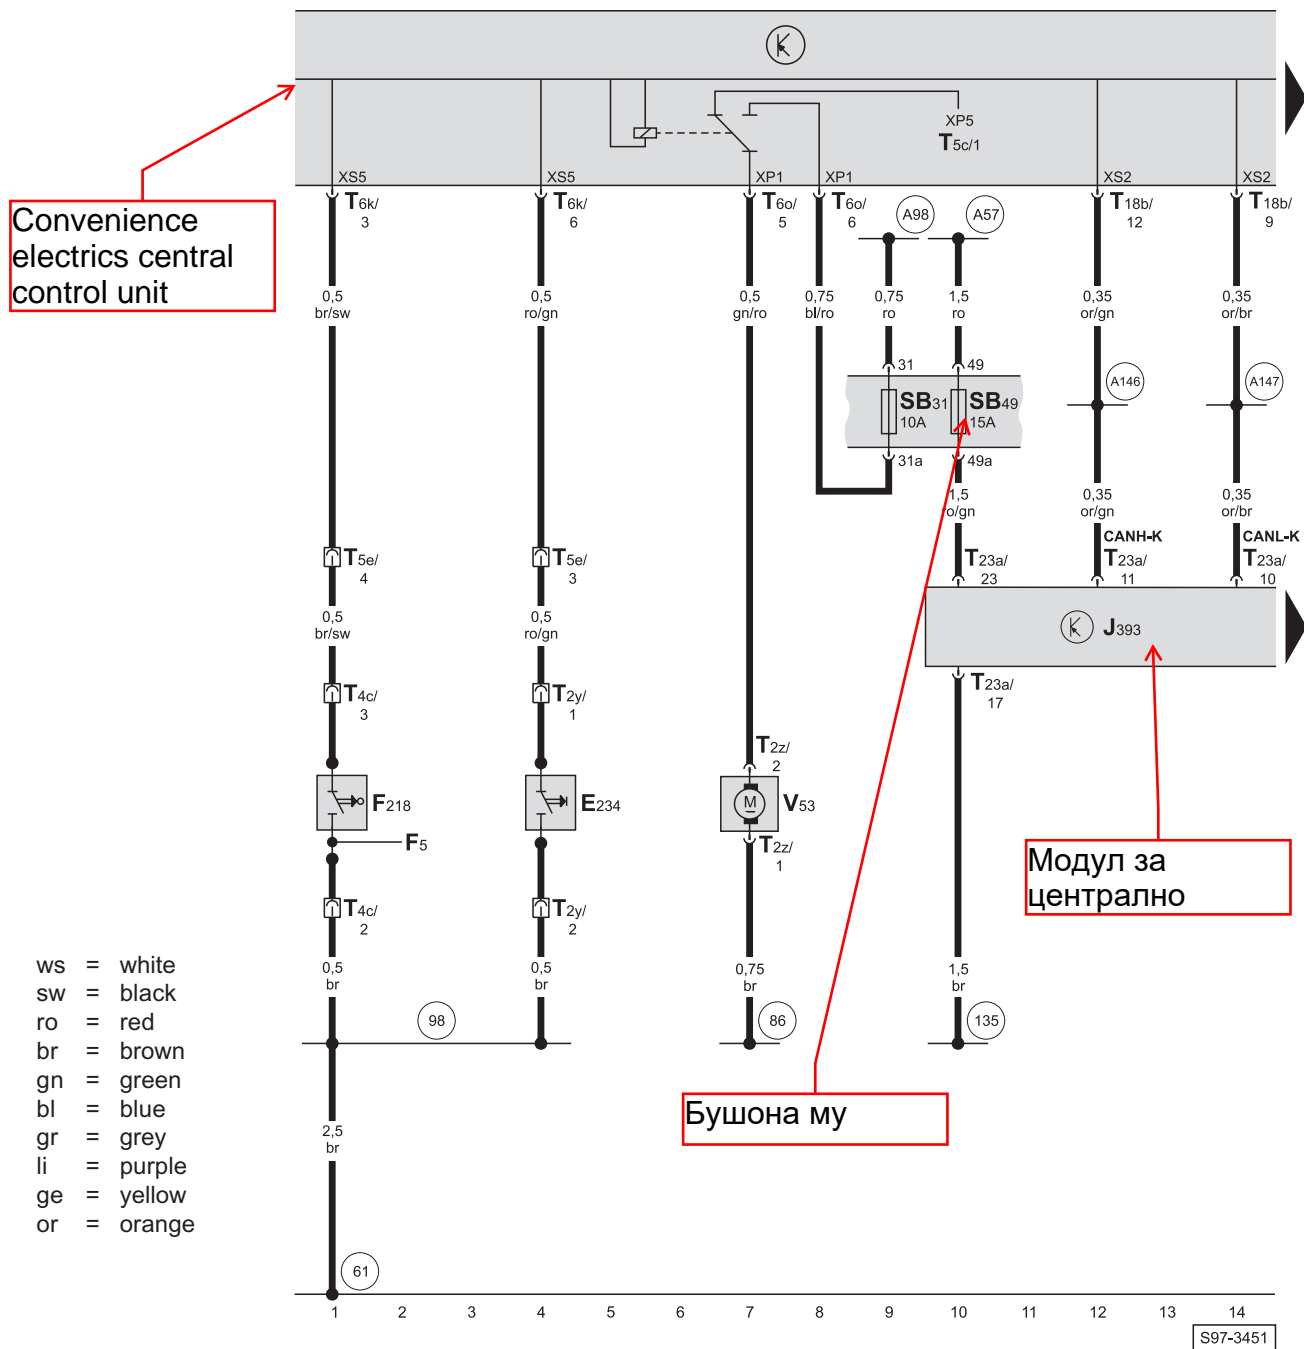


- E234 - Tailgate handle release button
- F5 - Luggage compartment light switch
- J393 - Convenience electrics central control unit
- T2y - Connector, 2-pin, at tailgate handle release button
- T2z - 2-pin connector, at tailgate/boot lid central locking motor
- T4c - 4-pin connector, at boot/tailgate lock
- T5c - 5-pin connector, at electrical system control unit (brown)
- T5e - 5-pin connector, at left C pillar (black)
- T6k - 6-pin connector, at electrical system control unit (red)
- T6o - 6-pin connector, at electrical system control unit (black)
- T18b - 18-pin connector, at electrical system control unit (black)

- T23a - 23-pin connector, at convenience electrics central control unit
- V53 - Tailgate/boot lid central locking motor

- 61 - Earth point, C-pillar left
- 86 - Earth connection -1-, in rear interior wiring loom
- 98 - Earth connection, in engine compartment wiring harness
- 135 - Earth connection, in wiring harness behind dash panel
- A57 - Positive connection (30a), in wiring loom behind dash panel
- A98 - Positive connection (30a), in wiring loom behind dash panel (applies only to models with telephone system)
- A146 - Connection (CAN-H, convenience), in wiring loom behind dash panel
- A147 - Connection (CAN-L, convenience), in wiring loom behind dash panel

Convenience electrics central control unit, central locking locking unit - driver side, central locking warning light, left door warning light

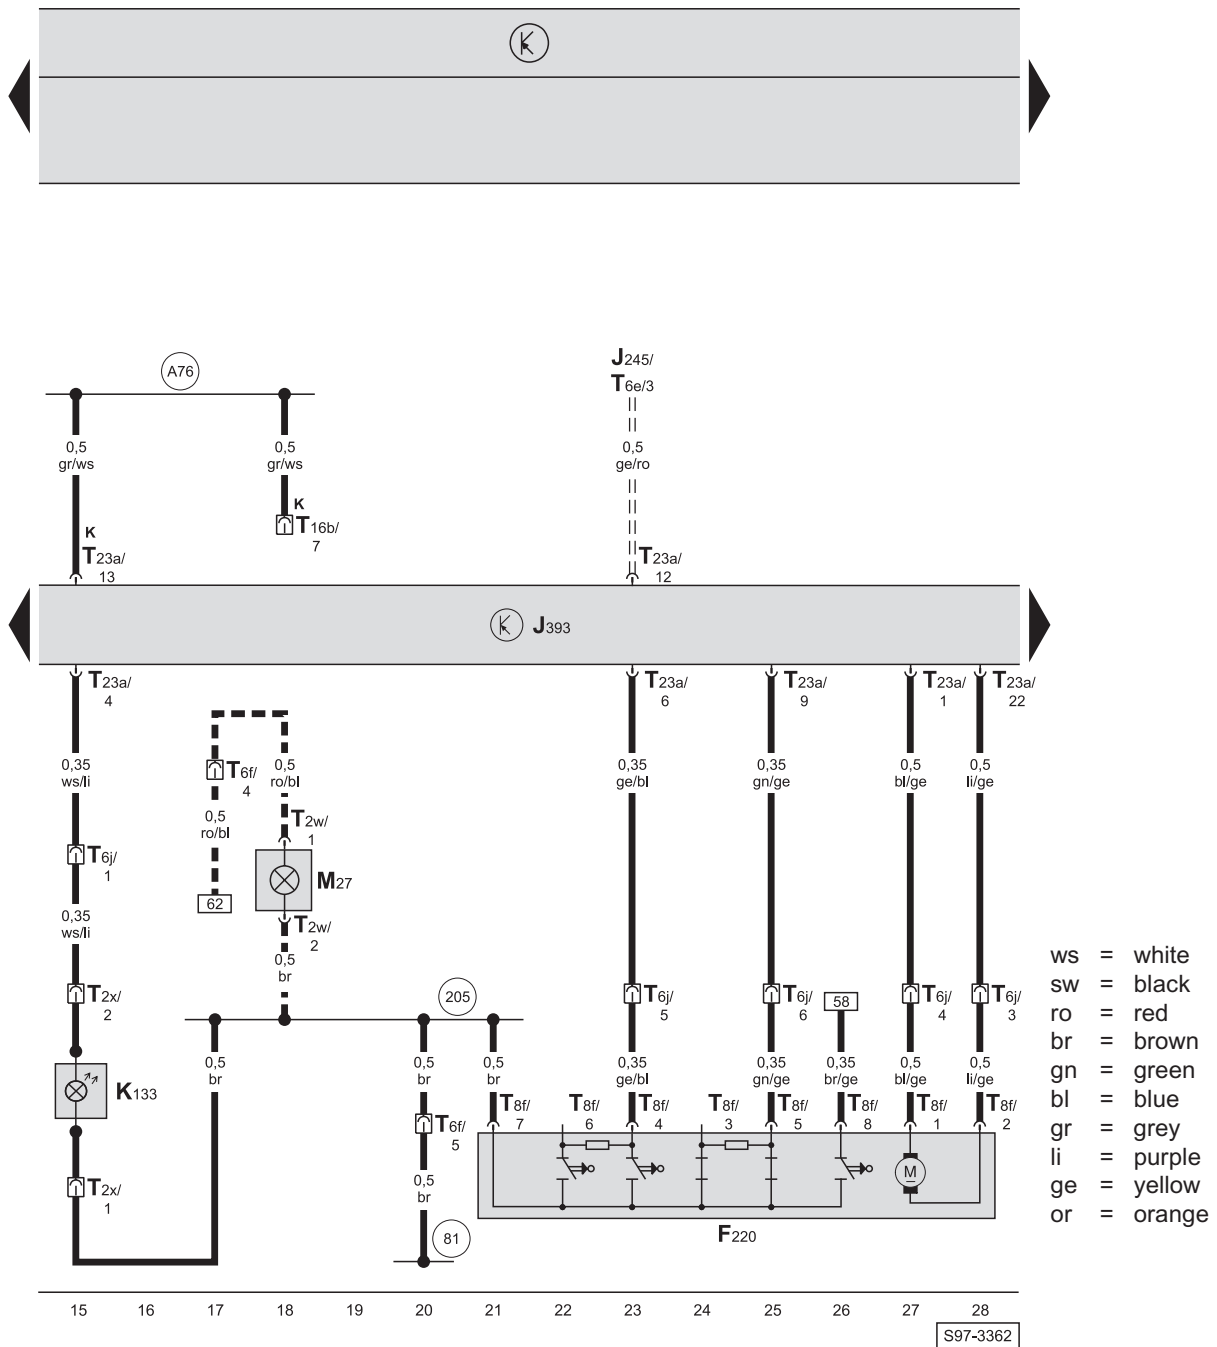

- F220 - Central locking lock unit, driver side (switch position - released, door closed)
- J245 - Sliding roof adjustment control unit
- J393 - Convenience electrics central control unit
- K133 - Central locking warning lamp
- M27 - Left door warning light
- T2w - Connector, 2-pin, at left door warning light
- T2x - 2-pin connector, at central locking warning lamp
- T6e - 6-pin connector, at sliding roof adjustment control unit
- T6f - 6-pin connector, at left A pillar (brown)
- T6j - Connector, 6-pin, at left A pillar (white)
- T8f - 8-pin connector, at central locking locking unit, driver side
- T16b - 16-pin connector, in glove box on driver's side (diagnosis connection)
- T23a - 23-pin connector, at convenience electrics central control unit

- 81 - Earth connection, in wiring harness behind dash panel
- 205 - Earth connection, in wiring harness of door assembly wiring driver side
- A76 - Connection (K diagnosis wire), in wiring loom behind dash panel on left

- == - Applies only to models with electric sliding roof
- ■ ■ - Applies only to models with door warning lights