

MUZ-FD25VA MUZ-GE25VA MUZ-GE42VA MUZ-GE60VA MUZ-HC25VA
 MUZ-FD25VABH MUZ-GE25VAH MUZ-GE42VAH MUZ-GE71VA MUZ-HC35VA
 MUZ-FD35VA MUZ-GE35VA MUZ-GE50VA MUZ-GE50VAH MUZ-HC35VABH
 MUZ-FD35VABH MUZ-GE35VAH MUZ-GE50VAH
 MUZ-FD50VA
 MUZ-FD50VAH

Failure mode recall function


Outline of the function

This air conditioner can memorize the abnormal condition which has occurred once.

Even though LED indication listed on the troubleshooting check table disappears, the memorized failure details can be recalled.


Flow chart of failure mode recall function for the indoor/outdoor unit

Operational procedure

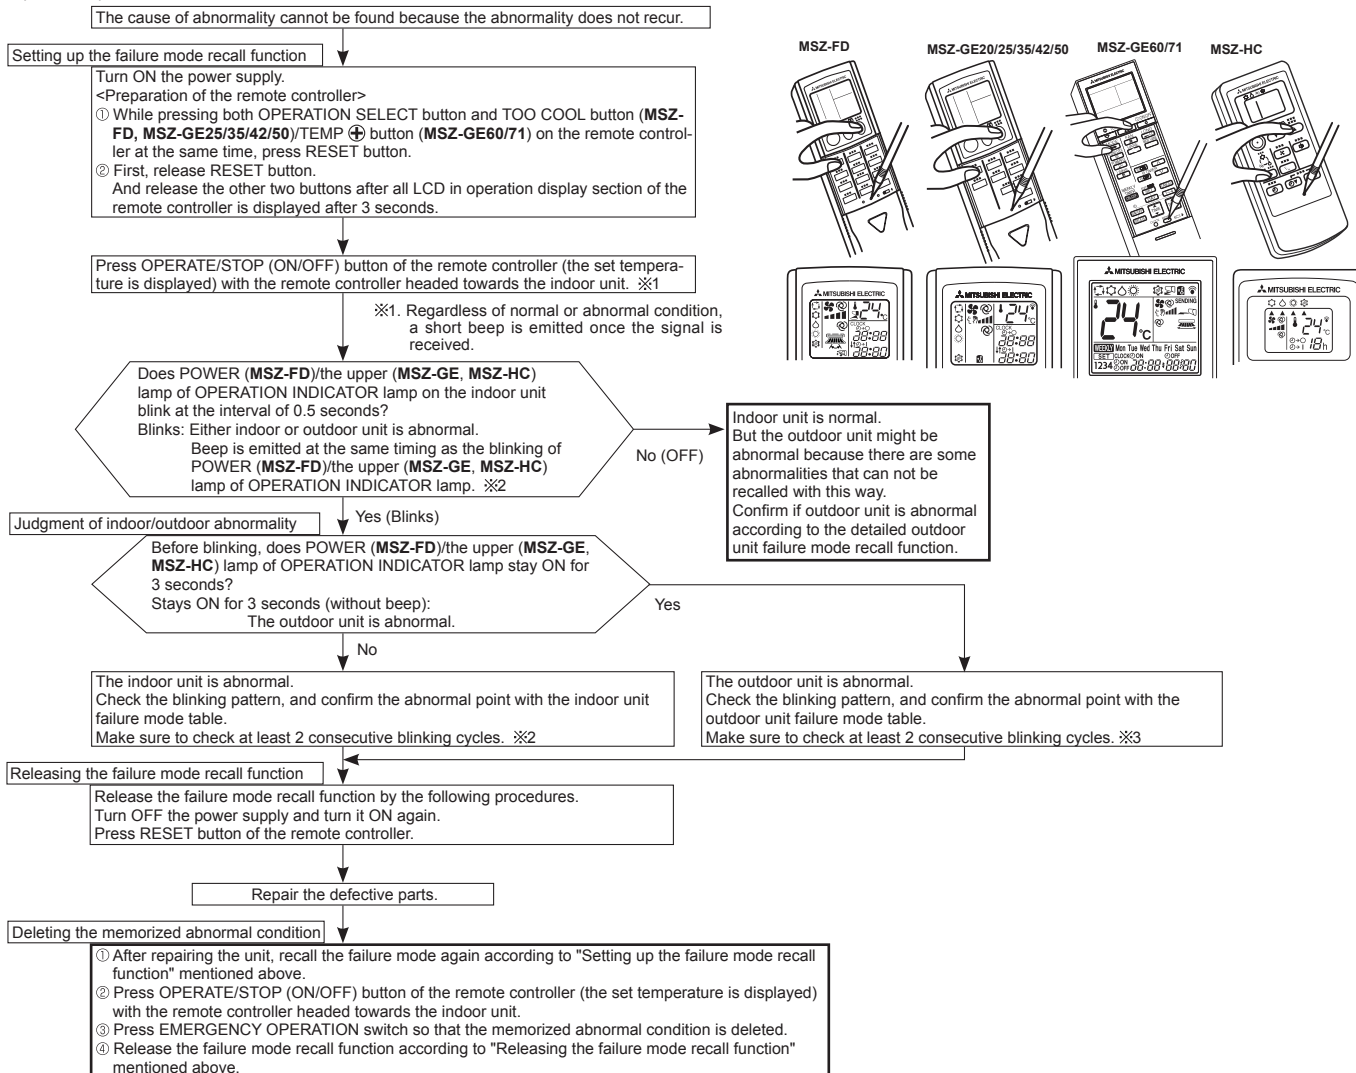

NOTE: 1. Make sure to release the failure mode recall function once it is set up, otherwise the unit cannot operate properly.
 2. If the abnormal condition is not deleted from the memory, the last abnormal condition is kept memorized.

※2. Blinking pattern when the indoor unit is abnormal:

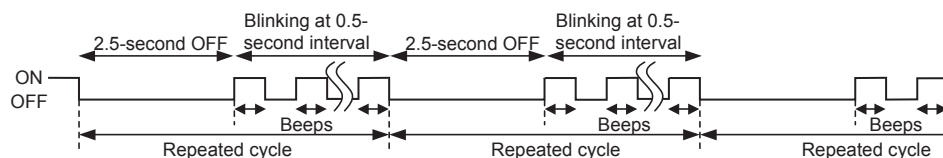

※3. Blinking pattern when the outdoor unit is abnormal:

